




ENSTO (EN)

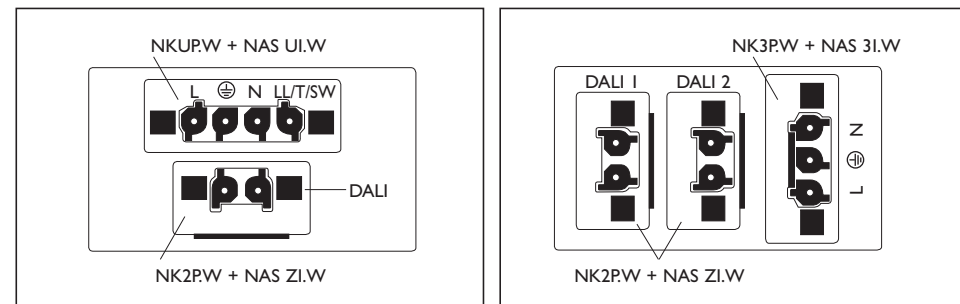


Push-In (PI)

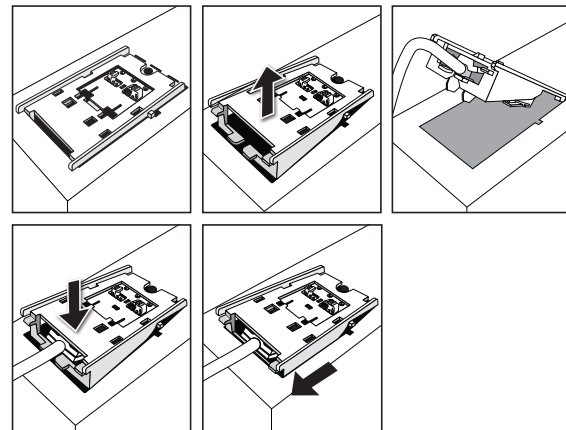


PSD

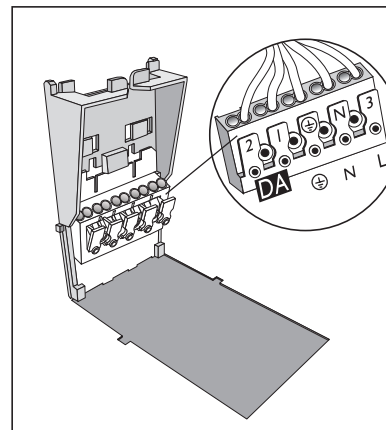

PSD-EL

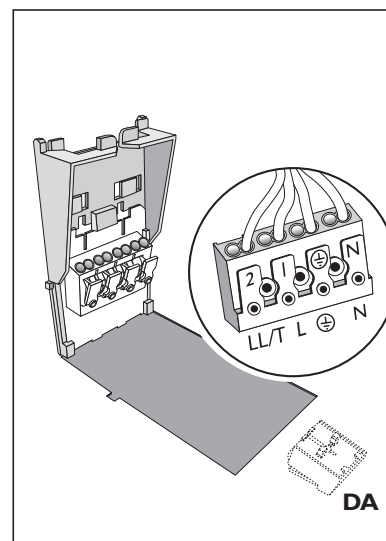


PSD (ACL)

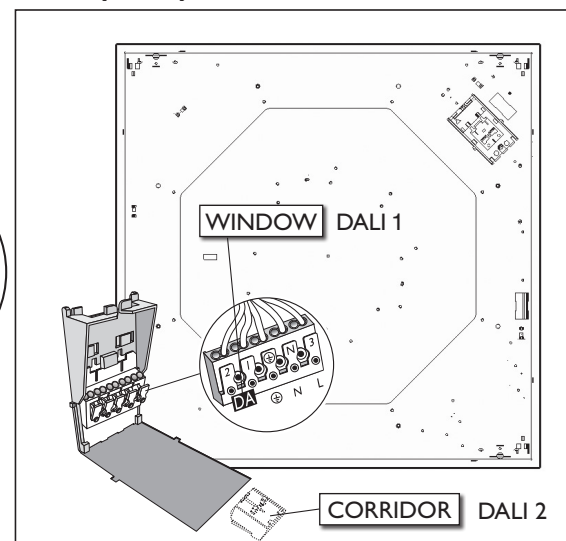

Philips Lighting
www.philips.com

4422 003 60923
08/11
Printed in the Netherlands
Data subject to change

ATTENTION!

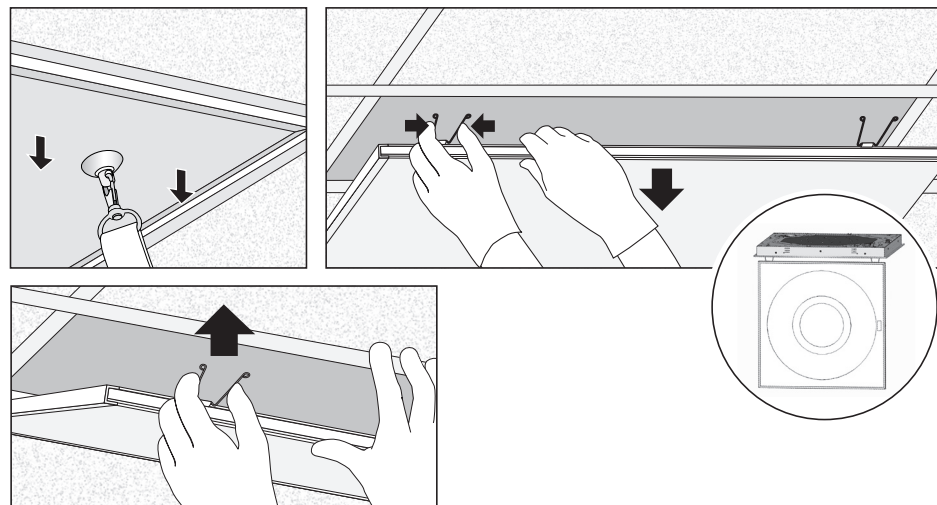

DayZone Lighting Technology

Maintenance instructions

Given the choices made in this unique lighting concept, there are a few instructions regarding the maintenance of this luminaire to assure the lighting qualities:

- During installation or maintaining the luminaire please use gloves to avoid spots on the cover.
- Dirty spots can be removed:
 - Only dust: with micro fiber cloth
 - Fingerprints, etc.: with a cleaner for synthetic material with antistatic effect.
- Remove the protection foil on the cover only short before usage of the lighting installation.
- Do not touch electronic components! ESD sensitive.
- Do not stare into LED beam.
- A DayZone master luminaire can control a maximum of 7 slave luminaires.

ATTENTION!



DayZone BBS560 / 562 / 567

Installation instructions

Instructions de montage
Montageanleitung
Montage instructie
Istruzioni di montaggio

Instrucciones de montaje
Instruções de montagem
Monteringsinstruktioner
Monteringsvejledning


Kokoonpano- ja kiinnitysohjeet
Montaj yönergeleri
Οδηγίες συναρμολόγησης
Instrukcja montażu

Szerelési utasítások
Návod k montáži
ИНСТРУКЦИЯ ПО МОНТАЖУ
Návod k montáži


IP 40

This luminaire must be earthed.
Ce luminaire doit être mis à la terre.
Diese Leuchte muß geerdet werden.
Dit armatuur moet worden geaard.
Questa armatura deve essere collegata a terra.
La Luminaria debe estar conectada a tierra.

Class I

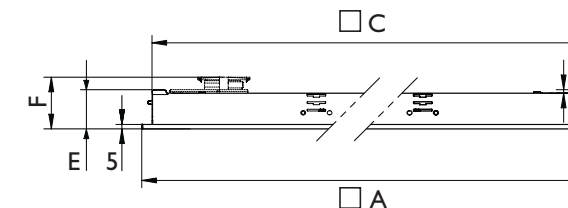

	A	C	E	F
Module 600	597	574	47	65
Module 625	622	574	47	65
Module 675	675	574	47	65

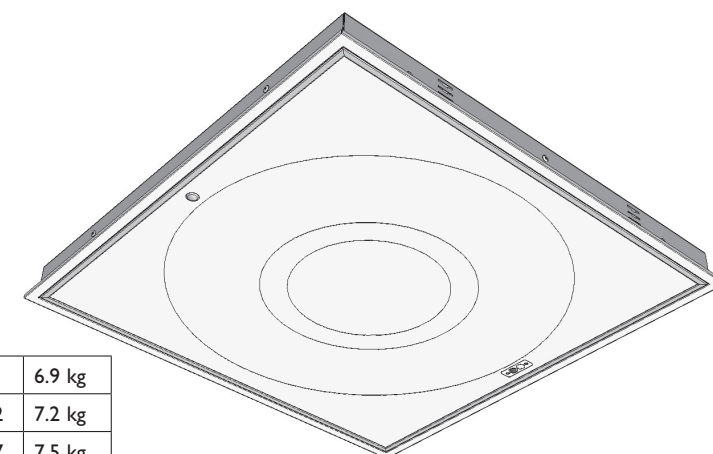


BBS561	6.9 kg
BBS562	7.2 kg
BBS567	7.5 kg


PHILIPS

PHILIPS


Lay-In

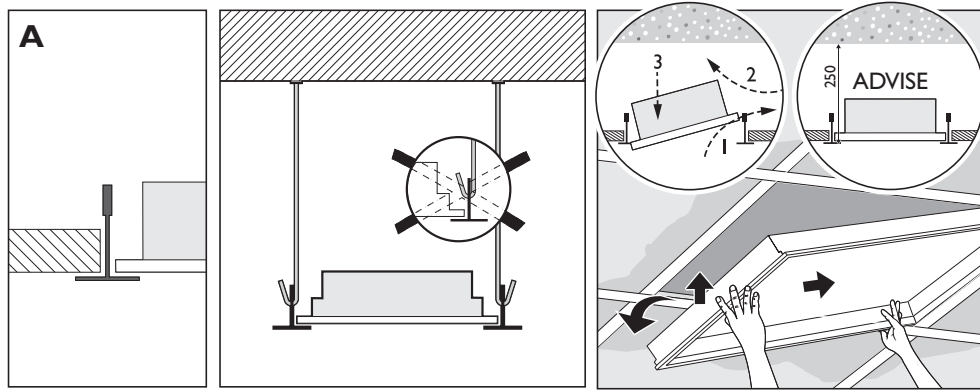


ZBS460 SMB-TPM

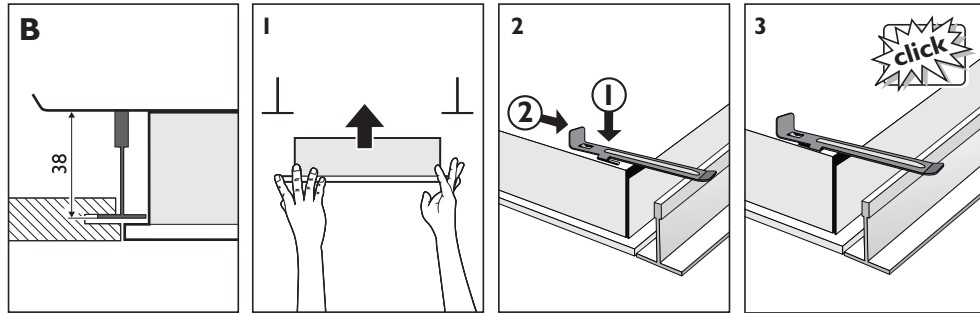



ZBS460 SMB (4 Pcs.)

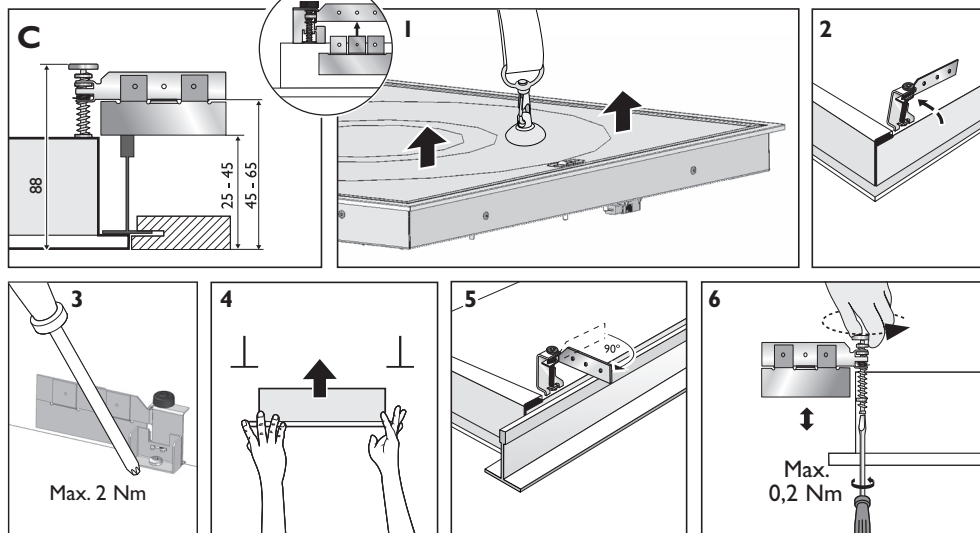


ZBS460 SMB-PLC

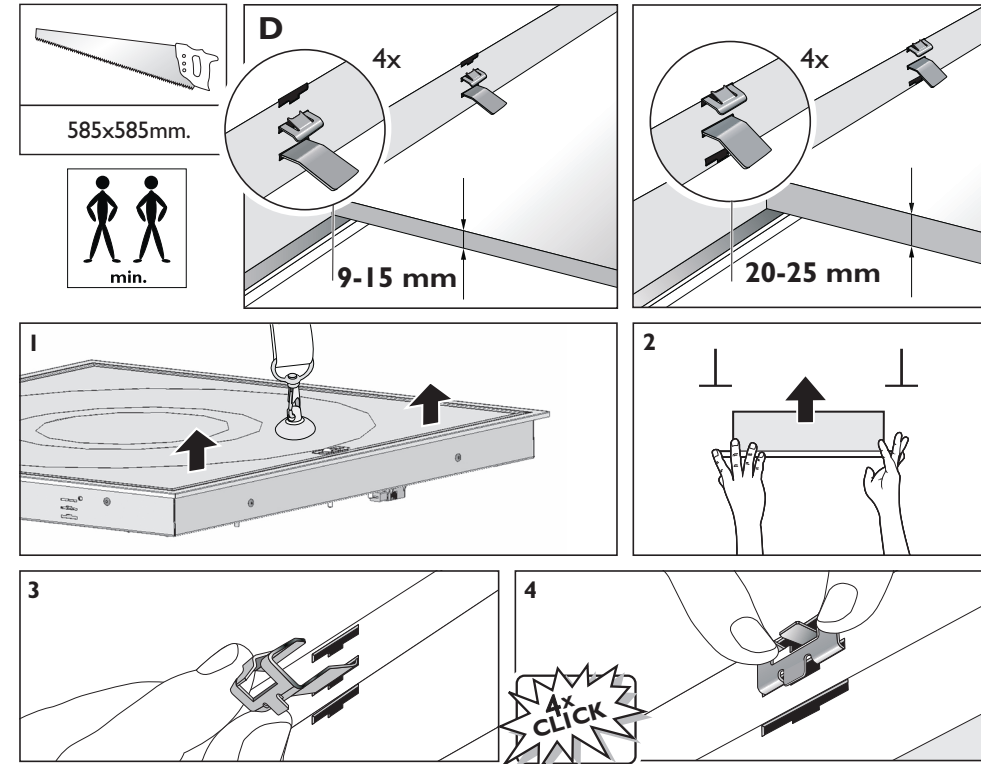


Wieland PSD-ACL / PSD (W)

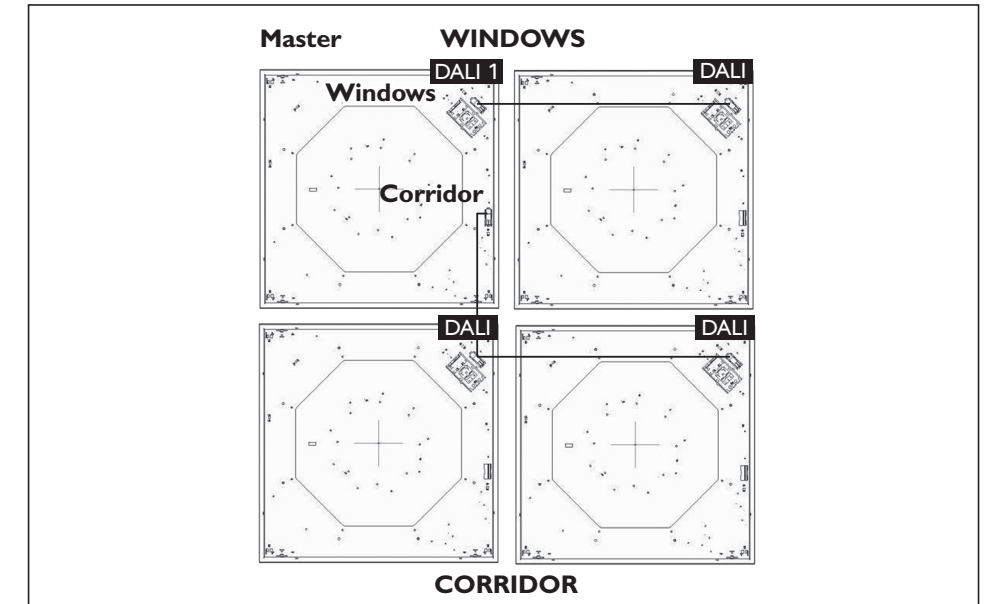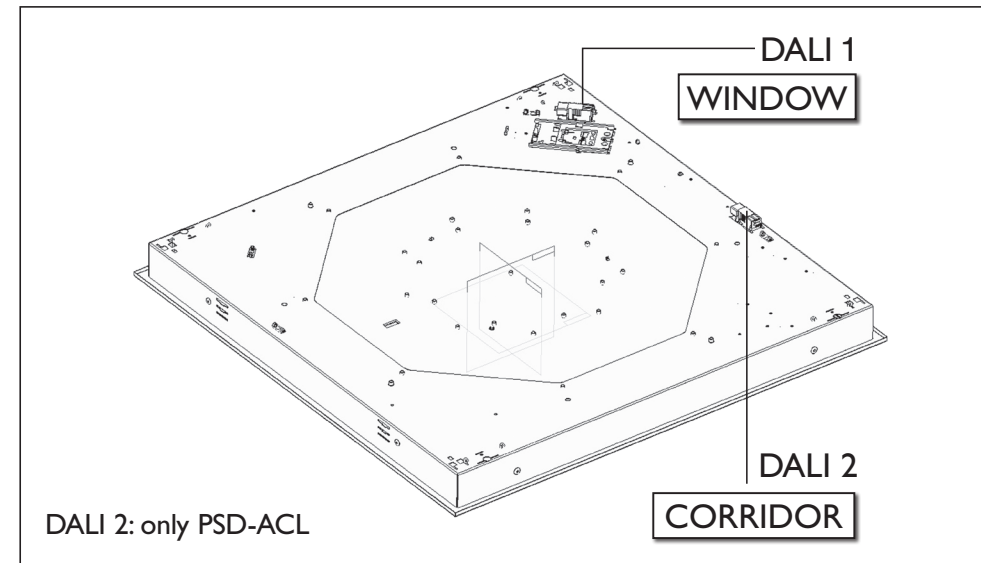

Wieland PSD EL

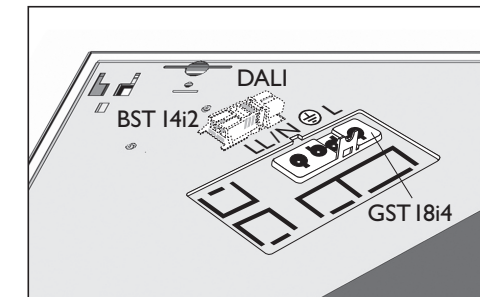

Wago PSD (WA)

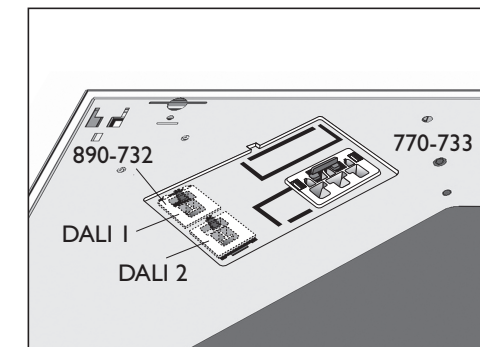

Wago PSD-EL (WA)

